


L.E.D. BOB FENDER LICENSE/TAILLIGHT BRACKET ASSEMBLY INSTRUCTIONS

'06 SOFTAIL

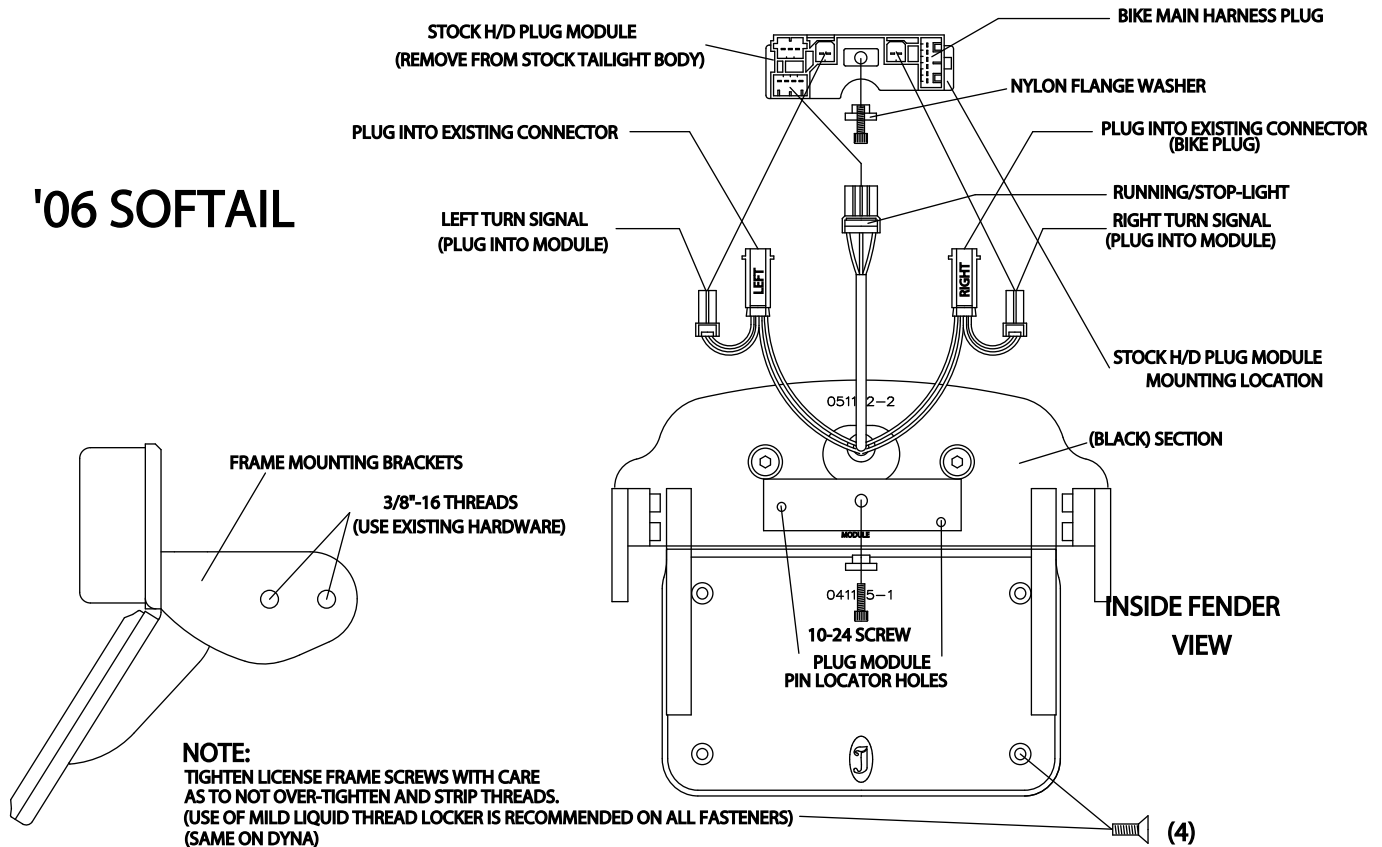

1. TURN OFF IGNITION AND/OR ACCESSORY KEY SWITCH.
2. REMOVE STOCK TAILLIGHT FROM FRAME MEMBERS.
3. REMOVE THE BLACK PLASTIC PLUG MODULE FROM STOCK TAILLIGHT BODY AND ATTACH TO JOKER (BLACK) SECTION AS SHOWN WITH THE 10-24 SCREW AND NYLON FLANGE WASHER AS SHOWN.....DO NOT OVER-TIGHTEN!
4. LOCATE THE PROPER PLUG LOCATIONS ON THE NEW JOKER UNIT AND INSERT THE PLUGS SNUGLY.
5. TURN ON THE IGNITION AND TEST ALL APPRIATE SWITCHES: LEFT TURN, RIGHT TURN, TAILLIGHT RUNNING LIGHT AND BRAKE LIGHT.
6. MAKE SURE ALL ARE FUNCTIONING PROPERLY.
7. INSERT THE ENTIRE ASSEMBLY INTO THE BOB FENDER AND BOLT IT UP INTO POSITION IN THE OPPOSITE ORDER OF DIS-ASSEMBLY.
8. TIP: MAKE SURE ANY SLACK IS REMOVED IN THE WIRING UNDER THE FENDER TO AVOID ANY CONTACT WITH THE REAR TIRE. "ZIP" TIE SECURELY IF NECESSARY.

Joker
MACHINE
PH: (909) 613-0028
FX: (909) 613-0098
WWW.JOKERMACHINE.COM