


VIEWTECH VII & VIII BAR ARM MIRRORS

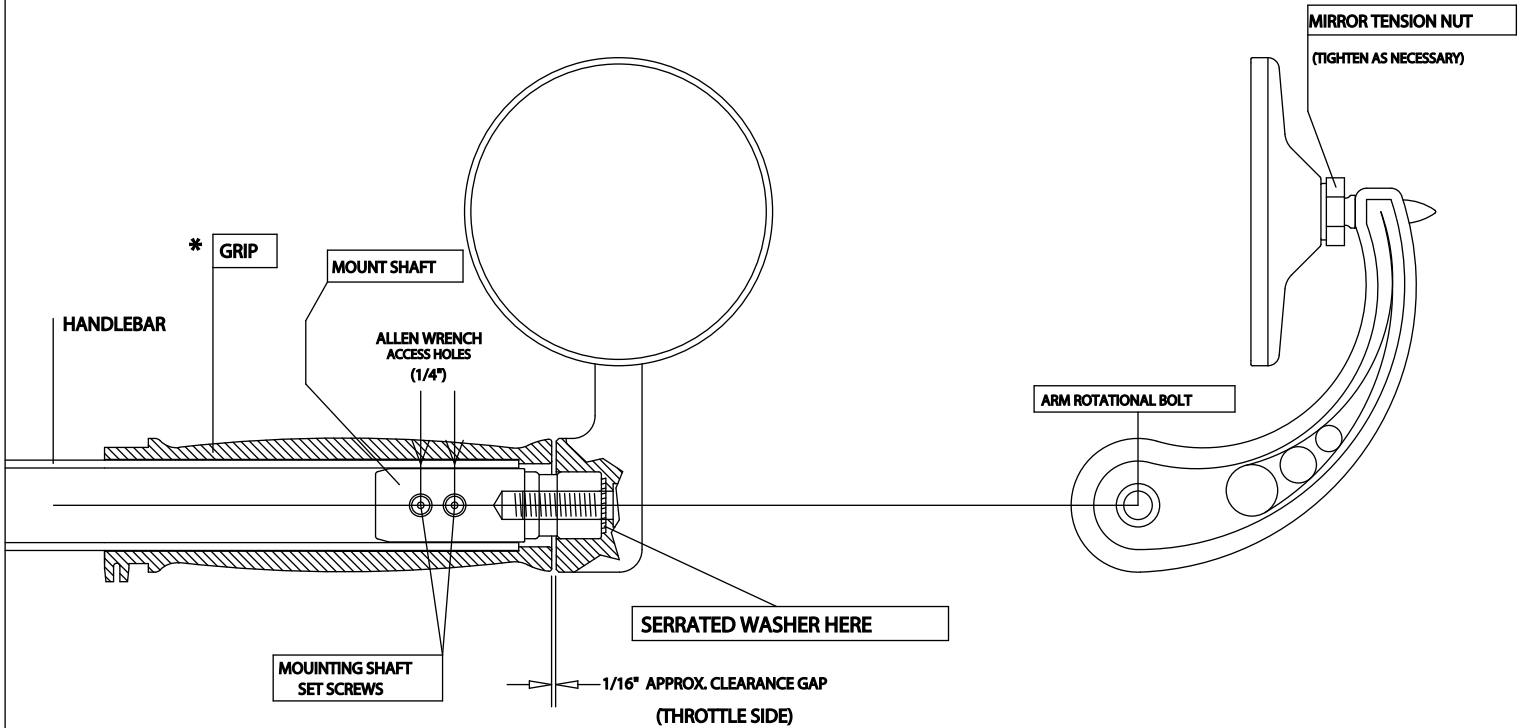

* NOTE:

IF USING STOCK RUBBER GRIPS,
CUT A 15/16" (.9375) DIA. HOLE
AS PRECISELY AS POSSIBLE INTO GRIP ENDS.

(USE LOCTITE ON ALL FASTENERS)

INSTALLATION

1. Place hand grip onto handlebar and determine the correct spacing between the mount section and the end of the grip.

2. After inserting the mounting shaft into the bar, take note on where to drill the 1/4" dia. access holes.

NOTE: * ONLY DRILL THRU ONE WALL OF BAR
* DE-BURR THE HOLES INSIDE AND OUT

3. Tighten set screws in mounting shaft.

4. Slide grip into position and assemble as normal.


5. Install serrated washer, then slide arm and mirror assembly onto mounting shaft.

6. Rotate mirror arm assembly to desired position and tighten rotational bolt.

7. Repeat the process on the stationary (left) grip side.

BILL OF MATERIAL

Qty	Description	Part No.
1	Mirror Head	
	3-1/4	061019-1
	2-1/4	061019-1B
1	Bar Arm Mount Section	
	Left	070703-1L
	Right	070703-1R
1	Mount Shaft	061019-4S
1	Tension Nut	
1	Pointed Ball Stem	
1	Plastic Spacer	
1	5/16-18 x 3/4 Socket Cap Screw	
1	5/16 External Serrated Washer	
2	10-24 x 1/2 Set Screws	

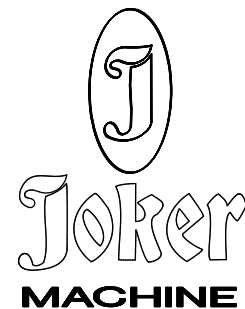

PH: (909) 613-0028
FX: (909) 613-0098
WWW.JOKERMACHINE.COM

070703 BA 9-11-07