L.E.D. UPPER DASH PANEL INSTRUCTIONS

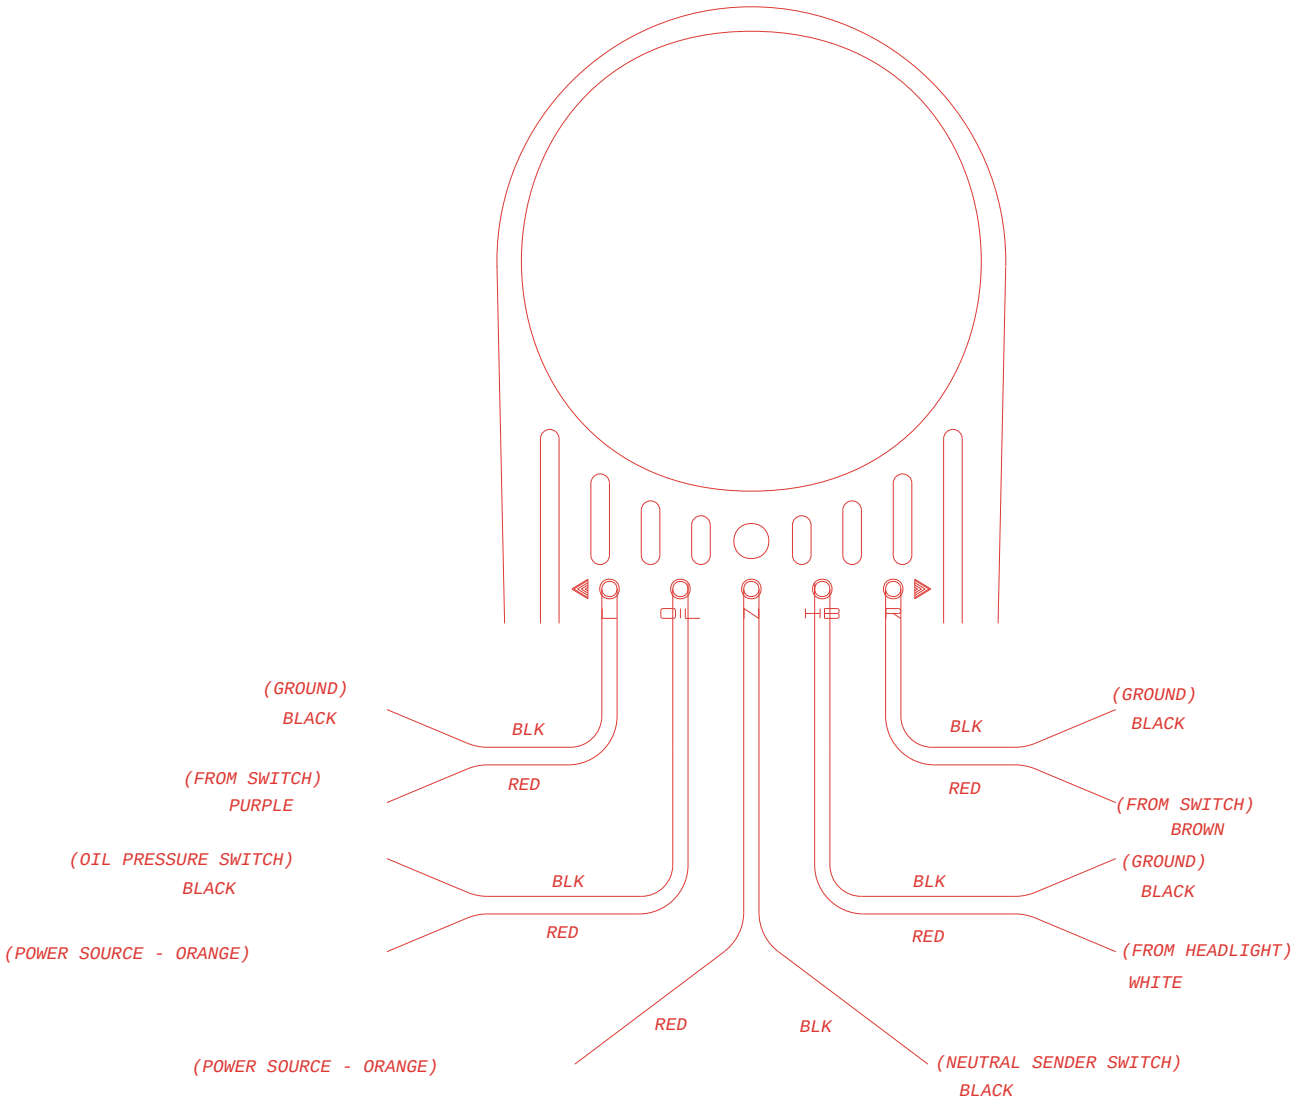

REMOVE PLASTIC LENSES FROM STOCK

DIE CAST SPEEDO HOUSING

TO WIRE:

REMOVE ALL LIGHT BULBS (KEEPING TRACK OF FUNCTION LOCATION TO AID WIRING THE L.E.D.'S TO THE RIGHT SPOT

FIND WIRING LEADS TO BULB SOCKETS &

SPLICE INTO APPROPRIATE WIRES

FOR EACH INDICATOR LIGHT.

TIP:

TO EASE INSTALLATION, TEST EACH L.E.D.

AS YOU GO INDIVIDUALLY.

Joker MACHINE

PH: (909) 613-0028
FX: (909) 613-0098

WWW.JOKERMACHINE.COM